
■X06HTⅡ Usage Notes

When using X06HT User Guide with SoftBank X06HTⅡ, substitute “X06HTⅡ” for “X06HT” and note the following additions/changes:

X06HT

Package Contents

■AC Adapter (HTCAF1)




Using HTC Sync (Japanese)

- Download HTC Sync software from this Website:
  http://www.softbank.jp/mb/r/support/x06ht/

X06HTⅡ

Package Contents

■AC Adapter (HTCAG1)

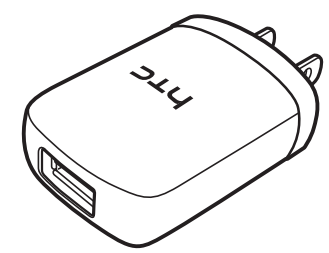

Using HTC Sync (Japanese)

- Download HTC Sync software from this Website:
  http://www.softbank.jp/mb/product/X/x06ht2/

Specifications

Display

LCD	3.7" touch-sensitive (WVGA) AMOLED
Resolution	480 x 800 (65,536 colors)

AC Charger

Power Source	100V-240V AC, 50-60Hz
Output Voltage/ Current	5V/1A
Charging Temperature	5˚C-35˚C
Dimensions*	42 mm (W) x 77 mm (H) x 22 mm (D)

*Approximate Value

Specifications

Display

LCD	3.7" touch-sensitive (WVGA) TFT
Resolution	480 x 800 (65,536 colors)

AC Charger

Power Source	100V-240V AC, 50-60Hz
Output Voltage/ Current	5V/1A
Charging Temperature	5˚C-35˚C
Dimensions*	36 mm (W) x 22.4 mm (H) x 47.7 mm (D)

*Approximate Value

Customer Service

For information about SoftBank handsets or services, call General Information. For repairs, call Customer Assistance.

SoftBank Mobile Customer Center

General Information	Customer Assistance
• From a SoftBank handset, dial toll free at 157 • From a landline/IP phone, dial toll free at 0800-919-0157	• From a SoftBank handset, dial toll free at 113 • From a landline/IP phone, dial toll free at 0088-240-113

If you cannot reach a toll free number, use the number (charges apply) below for your service area:

Hokkaido Area **Tohoku Area** **Hokuriku Area** **Kanto, Koshinetsu Area**	022-380-4380	**Tokai Area**	052-388-2002
Kansai Area	06-7669-0180	**Chugoku, Shikoku Area** **Kyushu, Okinawa Area**	092-687-0010

SoftBank Mobile Global Call Center

From outside Japan, dial +81-3-5351-3491（toll free from SoftBank handsets）
If handset is lost/stolen, call this number immediately (international charges apply)

(First Edition)